Brother HL-5240 Drum Unit and Toner Cartridge Replacement

Written By: Guy Patterson



INTRODUCTION

This guide tells you how to remove the drum & toner unit from the printer before you perform any maintenance.

Step 1 — Drum Unit and Toner Cartridge




- Press the front cover release button.
- Keep the button pressed and pull the cover toward yourself.

Step 2





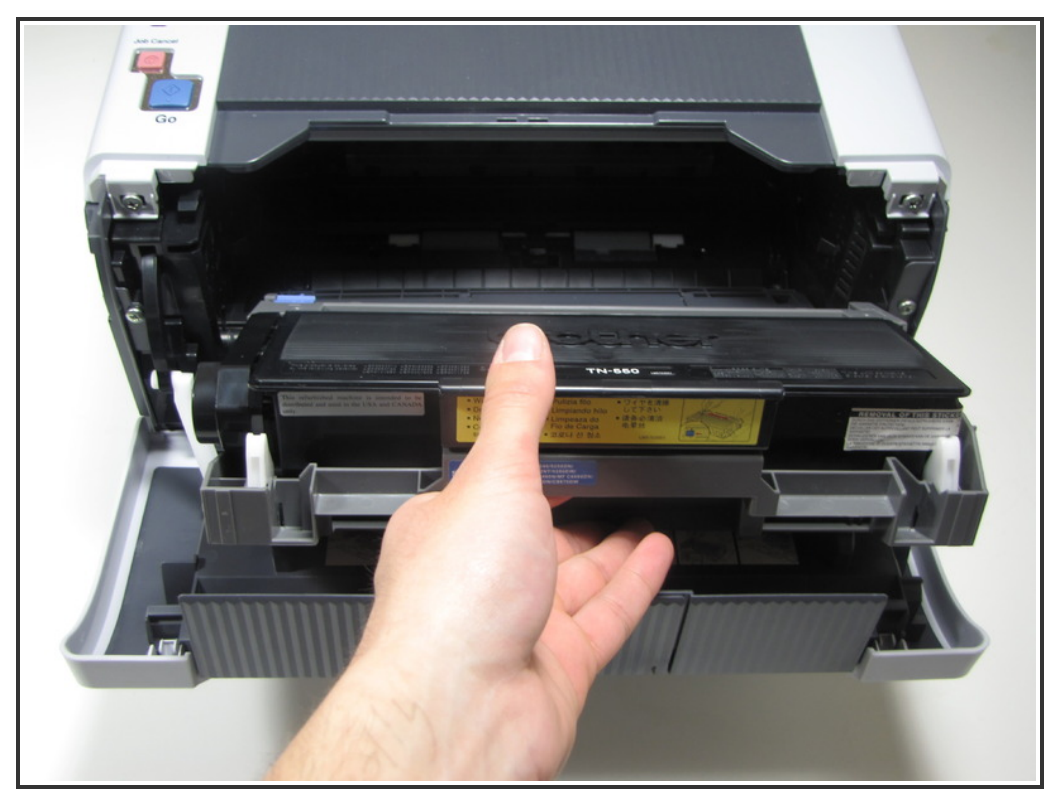

- With the front cover in the downward position, the drum & toner unit will be visible.
- Grab the black-and-yellow handle on the unit. Lift unit up and pull it out of the printer.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-02 12:03:58 PM.